

Time server

Network Time Server NTS

The network time server NTS is a compact and powerful NTP time server with a very good cost-performance ratio.

It can be used nearly anywhere to synchronize time systems, computers, fire alarms, audio and video surveillance etc. via NTP with the precise time.

The NTS can take over the time from the DCF transmitter in Germany or from GPS (e.g. from a DCF 4500 or GPS 4500 receiver).

Alternatively, it can be synchronized by another time server via NTP.


The NTS can synchronize LAN slave clocks via multicast or unicast via NTP. It can also assume the function of a time zone server.

The commissioning and operation is easy and can be done via terminal menu or the network management software MOBA-NMS.




NTS - Applications

NTP time server for small networks

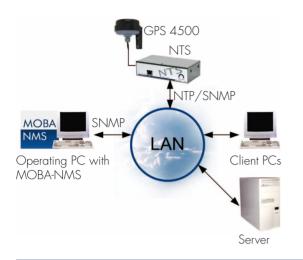

Synchronization of an external device with DCF Current Loop (one device only)



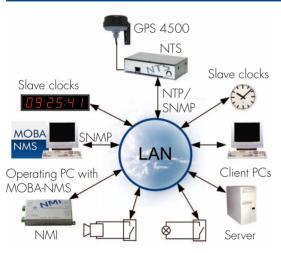


Network bundle

Time system consisting of:

- Time server NTS, synchronized via GPS or DCF receiver
- digital and/or analog LAN clocks, synchronized via NTP
- configuration software for clocks MOBA-NMS
- LAN switch relay for school bells, time-controlled illumination etc.

Any external devices such as servers, PCs etc. can be synchronized via NTP.

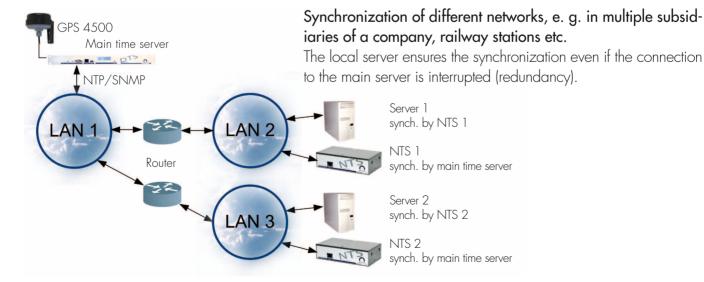



NTS - Features


The NTS can be used as a network time server (NTP) or as a master clock (DCF). As a master clock, the NTS synchronizes other sub-master clocks (e.g. ETC) or devices using DCF (Current Loop-Signal). Alternatively, synchronization impulses (PPS) can be generated.

The NTS can send alarms as e-mails or as SNMP traps (notifications). Furthermore, SNMP can be used for the configuration and monitoring of the state of the NTS' system (Get, Put).

Using MOBA-NMS, all Mobatime network devices such as e.g. analog and digital clocks, network interfaces (NMI), LAN relays as well as other network master clocks or time servers can be operated and configured.

The software MOBA-NMS allows for easy and convenient operation, configuration, programming, administration and monitoring via LAN.

Alternatively, a simple operation menu is provided by Telnet or SSH.

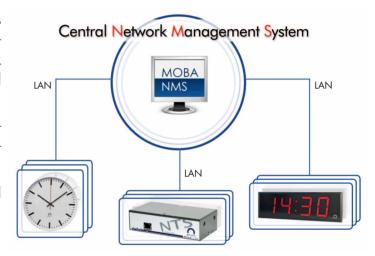


Mounting the NTS

With rubber pads, the NTS can simply be put on a flat surface (ill. 1).

Using the two mounting brackets, the NTS can also be mounted to a wall (ill. 2).


Optionally, two brackets for rack mounting are available (ill. 3).

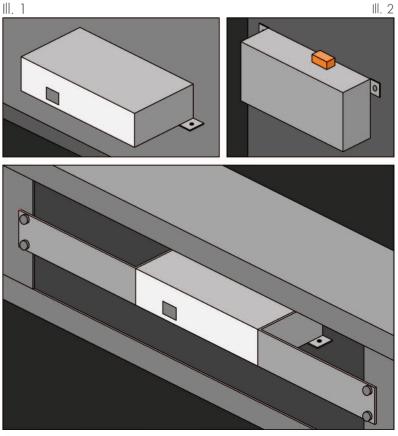


Ⅲ. 3



NTS - Technical details

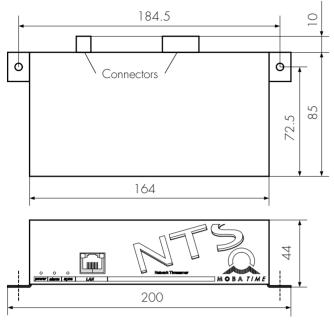

Option: mounting brackets for 19" rack

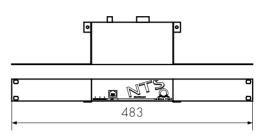



Art.	. no. 205650
NTP V4 (fully V3 compatible), RFC 1305 (port SNTP (UDP), RFC 2030 (port 123) TIME (TCP/UDP, RFC 868 (port 37) DAYTIME (TCP/UDP), RFC 867 (port 13) Max. number of NTP and SNTP requests per se Modes: Server, Broadcast, Multicast	
10BaseT / 100BaseTX (IEEE 802.3) Auto-negotiation / manual Connector: RJ-45	
IPv4: static IP; IPv6: DHCPv6, autoconfig, static	: IP
DCF (UTC) or pps (configurable)	
DCF 4500 / GPS 4500 (output for GPS 4500) power supply available) / NTP
LAN link, LAN speed / network activity, time sy	nch. status, power supply, alarm, DCF in, init (initialization)
20 VDC, max. 100 mA (for power supply of a	GPS receiver)
External mains supply included in delivery 100 or 24 - 28 VDC / 200 mA	- 240 VAC / 50-60 Hz / max. 12 W
Operating temperature: -5°C50°C Relative humidity: 5% - 95% (non-condensing)	
GPS (DCF input) to NTP server	typically $< \pm 0.5$ ms
DCF 77 radio receiver to NTP server	typically $< \pm 5$ ms
NTP client to NTP server	typically $< \pm 0.5$ ms
GPS (DCF input) or NTP client to DCF/impulse	typically $< \pm 2$ ms
Holdover (unsynchronized)	$< \pm 0.1$ s/day (after 24h synch. from time source)
RTC with time saving for min. 5 days (without b	attery)
1 line with time zone server function via multicast or unicast	
Telnet or SSH, MOBA-NMS over LAN or operation via SNMP	
	NTP V4 (fully V3 compatible), RFC 1305 (port SNTP (UDP), RFC 2030 (port 123) TIME (TCP/UDP, RFC 868 (port 37) DAYTIME (TCP/UDP), RFC 867 (port 13) Max. number of NTP and SNTP requests per set Modes: Server, Broadcast, Multicast 10BaseT / 100BaseTX (IEEE 802.3) Auto-negotiation / manual Connector: RJ-45 IPv4: static IP; IPv6: DHCPv6, autoconfig, static DCF (UTC) or pps (configurable) DCF 4500 / GPS 4500 (output for GPS 4500 (LAN link, LAN speed / network activity, time sy 20 VDC, max. 100 mA (for power supply of a External mains supply included in delivery 100 or 24 - 28 VDC / 200 mA Operating temperature: -5°C50°C Relative humidity: 5% - 95% (non-condensing) GPS (DCF input) to NTP server DCF 77 radio receiver to NTP server NTP client to NTP server GPS (DCF input) or NTP client to DCF/impulse Holdover (unsynchronized) RTC with time saving for min. 5 days (without be 11 line with time zone server function via multical)